



## PREMIUM 3D GLASSES USE & CARE GUIDE



## Glasses & Accessories

Following items are included in the package



- Active 3D Glasses (1)




- Protective Case (1)



- USB Charge Cable (1)




- Cleaning Cloth (1)

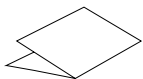

- User's Guide (1)


- These 3D glasses are operated by receiving an IR (infrared) signal from a 3D-ready television.
- For proper use, glasses should face TV.
- Eliminate objects blocking signal between TV and glasses.
- Use glasses away from other (IR) devices, lighting equipment or heating equipment.

## Part & Components

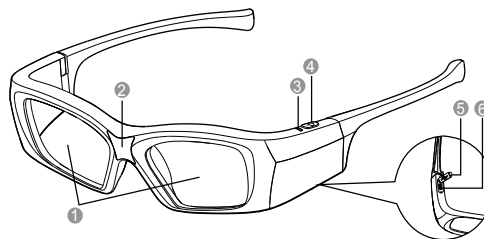

- LCD (Liquid Crystal Display) lenses
- IR (Infrared) signal receiver
- LED (Light-Emitting Diode) indicator
- On/Off power button
- USB (Universal Serial Bus) port cover
- USB recharging port


## Glasses Operation

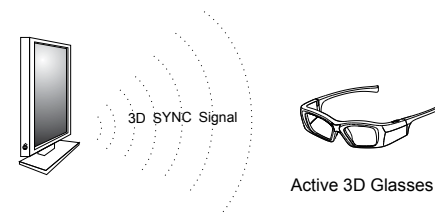

### 3D Television Viewing

- Locate in front of 3D-Ready TV.
- Depress power button on left temple:
  - On:** Green LED lights for 1.5 seconds.
  - Off:** Green LED blinks three times.
  - Low Battery:** Green LED blinks once every 3 seconds.
  - Charging Battery:** Red LED is on.
  - Fully Charged Battery:** Red LED goes out.
- Place 3D glasses on your face.
- Face squarely toward 3D IR signal from TV.

## Recharging Your Glasses

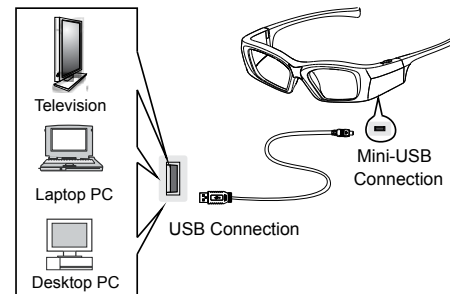

- The LED indicator is at the top of the left temple.
- When LED indicator is blinking, please recharge your 3D glasses.
- Recharge glasses by using the USB cable.
- Full charge will be completed in 2 hours.
- LED indicator on when charging, off when charged.

## Safety Precautions

- Use this product only for watching 3D video images on a 3D-ready television.
- This product is powered by a rechargeable battery. Do not damage or destroy battery.
- When not in use, protect your 3D glasses by placing it in the 3Active case provided.
- When cleaning lenses, only use a clean soft fabric cloth. Any chemical cleaning agent may damage product or cause product malfunction.
- Do not drop or modify these 3D glasses.
- Magnetic fluorescent lights may cause flicker to your 3D glasses.
- Some people may experience eye strain, fatigue, nausea, or other discomfort when using this product. DO recommends all viewers take regular breaks while watching 3D images.
- If you experience discomfort, please stop using this product until discomfort ends; consult a physician if you believe necessary.
- The vision of young children is under development. Consult your doctor before allowing young children to watch 3D video images.

## Specifications

Shutter:	Liquid Crystal	Field of Sync:	120Hz
Contrast Ratio:	1000:1	Weight:	1.4 oz
SYNC Operation:	IR	Luminous Transmittance:	38 +/- 2%
Battery Type:	Rechargeable Lithium/Polymer Battery		
Battery Operating Life:	Up to 30 hours of battery charge per full charge Battery usage will vary based on activity		
Operating Condition:	Working Temperature	32° - 95° F	
	Storage Temperature	28° - 100° F	

This device complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection from harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause harmful interference to radio communications.